 




CaddyLite ONE – S, v8

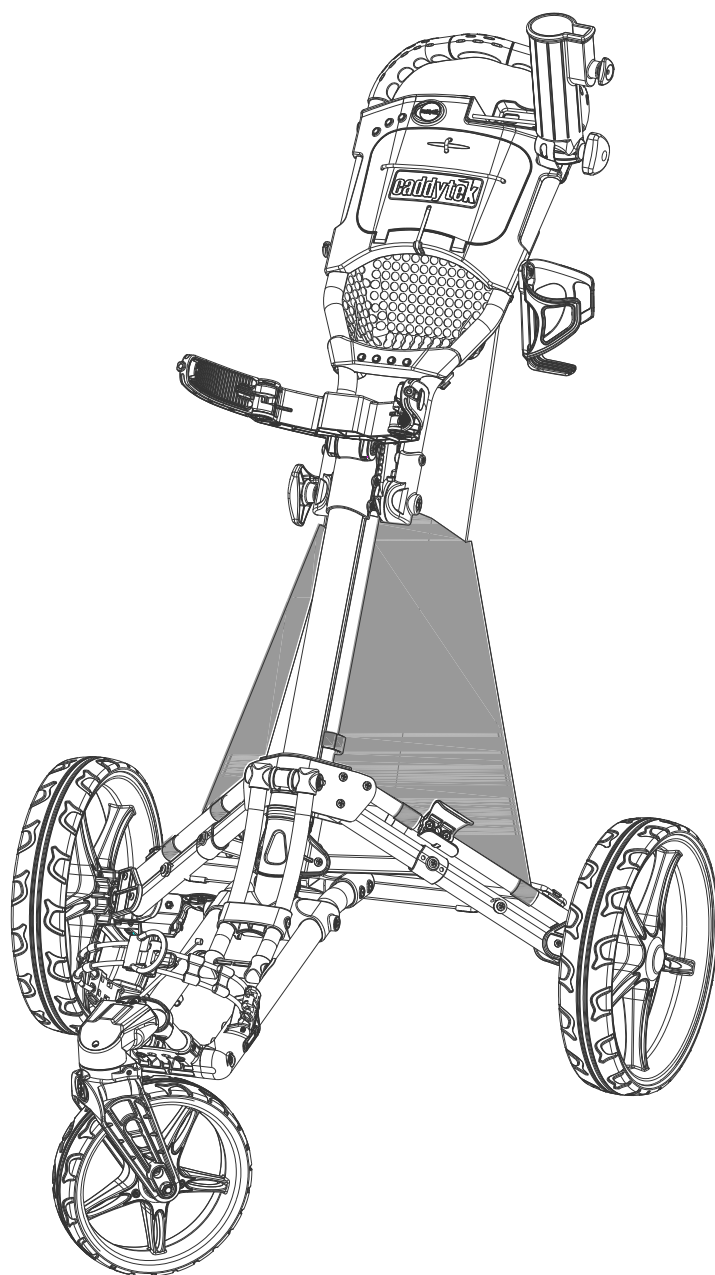

User's Manual

CaddyTek Inc.
2075 S. Atlantic Blvd., # C
Monterey Park, CA 91754, USA
www.caddytek.com

WARNING:

FOR YOUR OWN SAFETY, PLEASE REVIEW THESE WARNINGS AND KEEP THIS USER GUIDE FOR FUTURE REFERENCE.

- Before using this golf cart, please read and understand the important instructions and warnings in this user guide.
- AVOID injury by always following the folding and unfolding the cart instructions carefully
- AVOID INJURY by keeping clear of moving parts while adjusting, folding or unfolding this cart.
- ALWAYS make sure the cart is fully extended and locked before use.
- ALWAYS make sure the cart is folded and locked properly before lifting or transporting.
- ALWAYS use the brake when parking the cart.
- DO NOT run while using this cart.
- DO NOT use accessories other than those designed specifically for this cart.
- Keep hands and fingers away from moving parts or sliding sections of the cart!

 
Package contents:

1. The main frame of the cart
2. Two main wheels
3. Front wheel assembly
4. Umbrella holder
5. Drink holder
6. This user manual
7. Tools for adjustment

In case any of the above items are missing or damaged, please call **800-906-6918** or email service **caddytek@gmail.com** to report.


Parts identification:

- A: PVC handle grip
B: Umbrella holder
C: Umbrella holder base
D: Scorecard holder assembly
E: Umbrella holder storage rack
F: Handle frame
G: Upper bag holder bracket set
H: Adjustable handle mechanism
I: Main frame
J: Front connection Rod
J1: Main connection Rod
K: Leg frame bracket
L: 2 holes right leg frame
L1: 2 holes left leg frame
M: 4 holes right leg frame
N: Lower bag holder bracket assembly
O: Supporting cable
P: Stabilization bar
Q: Main lower frame tube
R: Right wheel lock assembly
R1: Left wheel lock assembly
S: Foot brake assembly
T: Rear wheel assembly
U: Front wheel assembly
V: Drink holder
W: One-click folding push button
X: Handle mesh net
Y: Lever for locking/unlocking front wheel swivel
Z: Holding slot
Z1: Basket with cooler

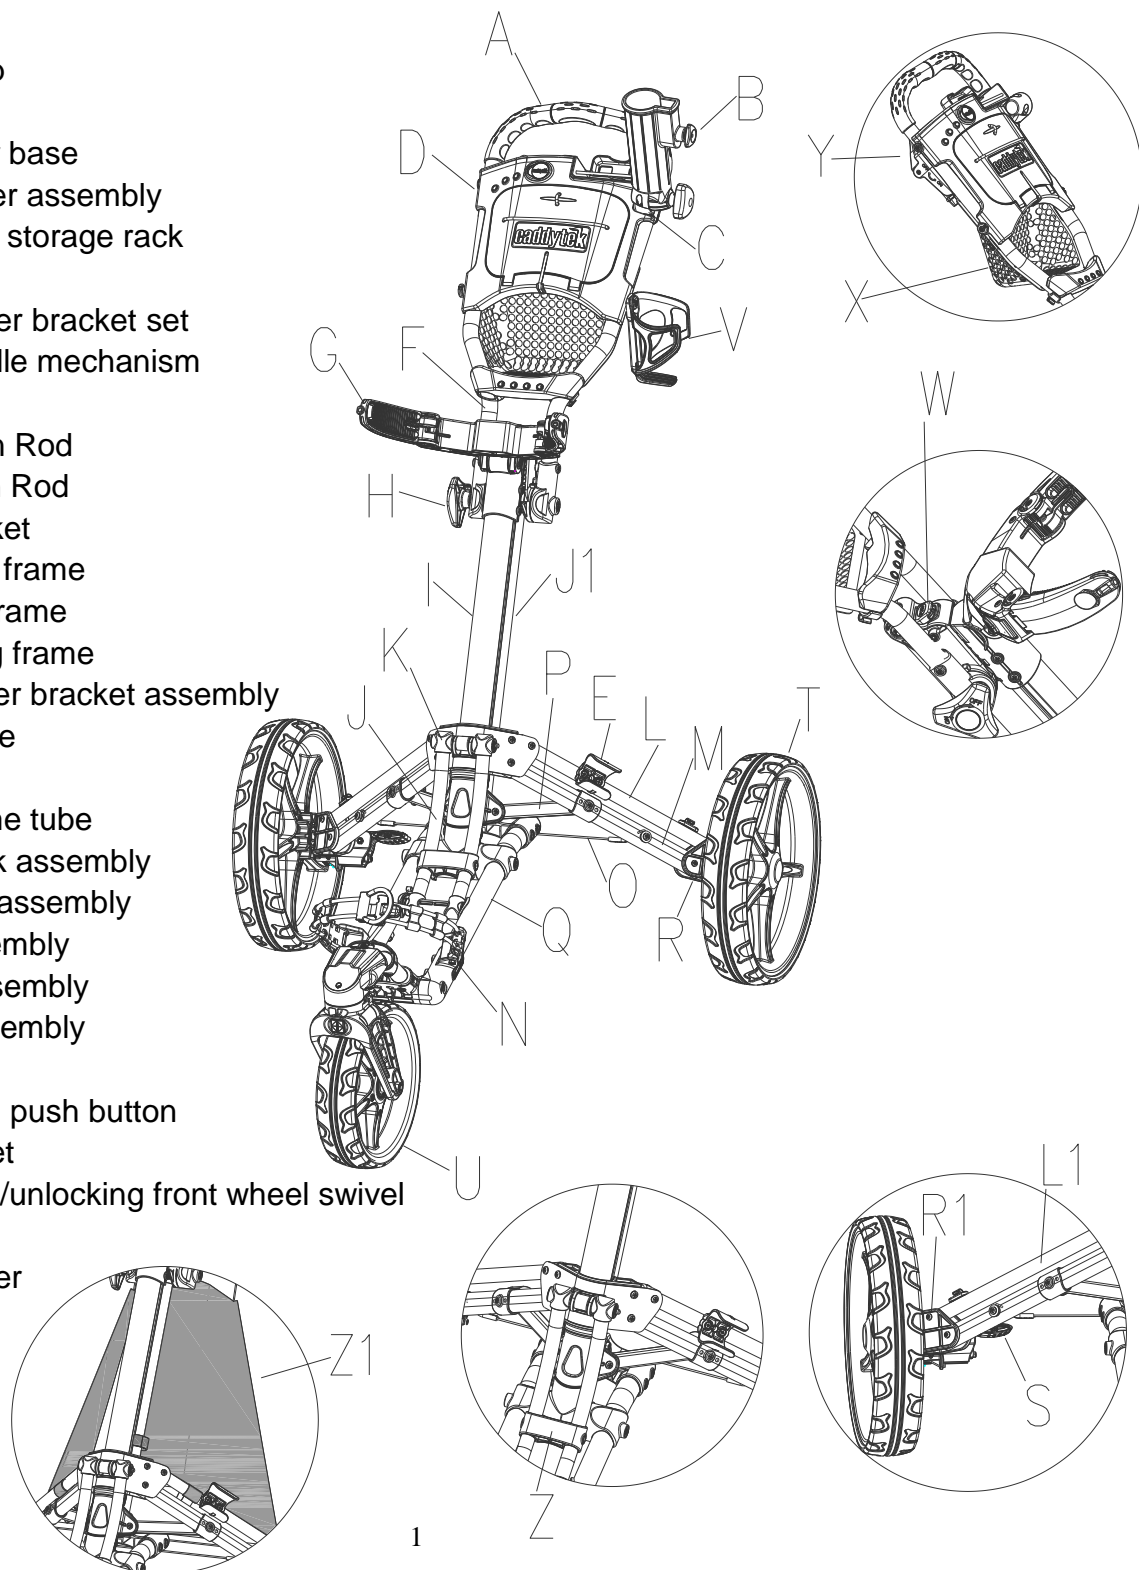


Assembly the cart

 Fig. 1

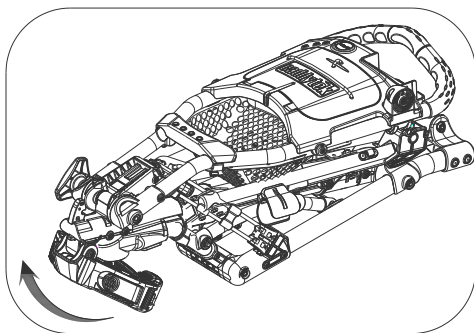


Lift the upper bag bracket as shown in Fig. 1.

 Fig. 2

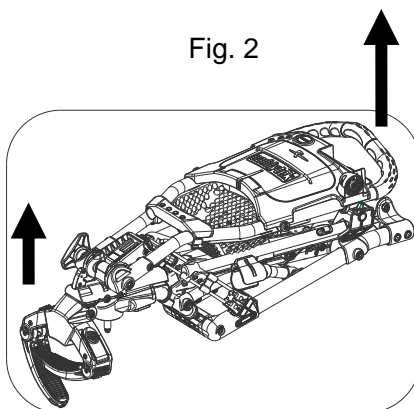


 Simply pull the handle and upper bag bracket as shown in Fig. 2 to extend the cart. (Shake the cart slightly to release the main frame from the holding slot if necessary.)

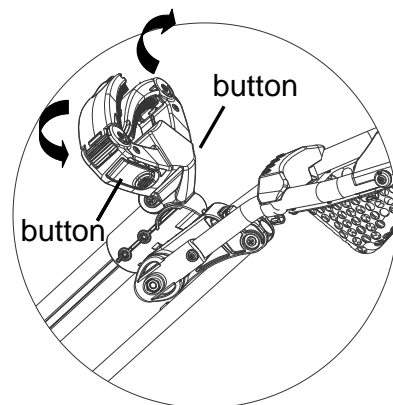


Press the button on both sides of the golf bag holder socket to unfold the wings automatically in Fig. 3.

 Unfolding motion

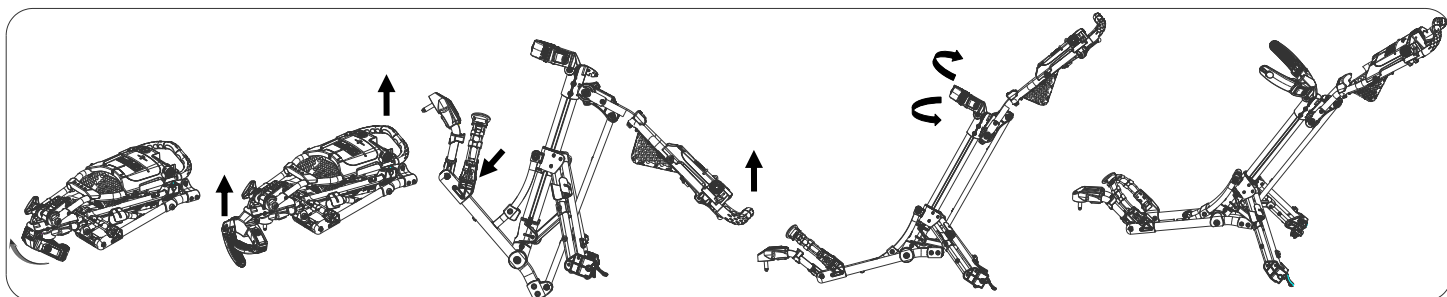

Install the main wheels

 
Fig. 3

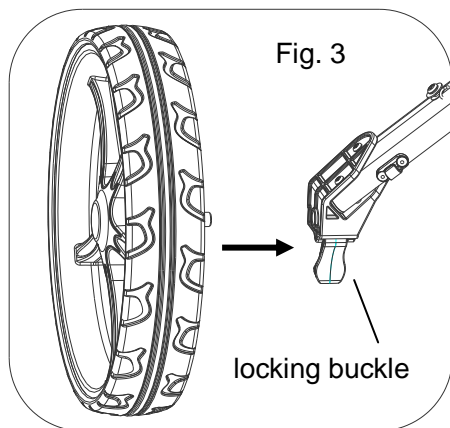

Release the wheel locking buckle, insert the wheel axel into the wheel holder completely and then tighten the locking buckle.


Install the front wheel

  Fig. 4

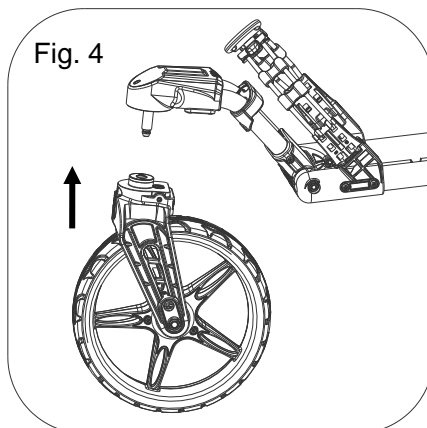


 
Simply insert the front wheel assembly into front wheel holding frame as shown in Fig. 4.

 Fig. 5


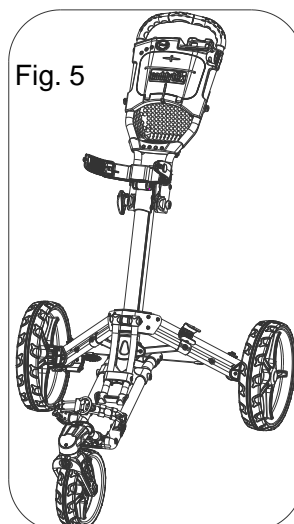


The cart is fully extended as shown in Fig. 5.



Folding the cart

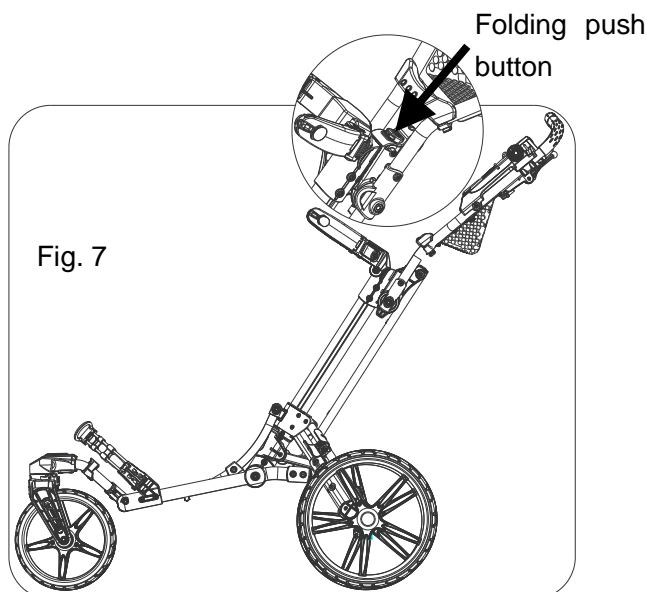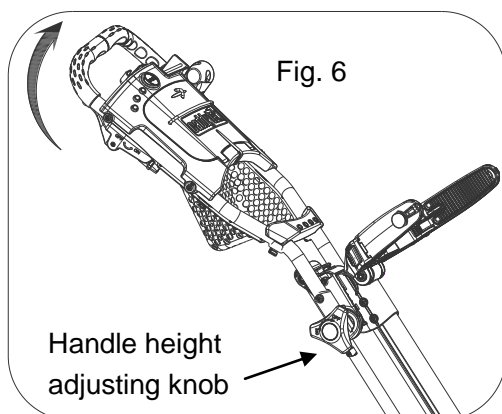

  Make sure the handle height adjusting knob is fully tighten .Slightly lift up the handle as Fig. 6 then press the folding button and push the handle downward as shown in Fig. 7 , Fig. 8 to fold the cart till the main frame clicks into the holding slot as in Fig. O. The cart folded as Fig. 9.

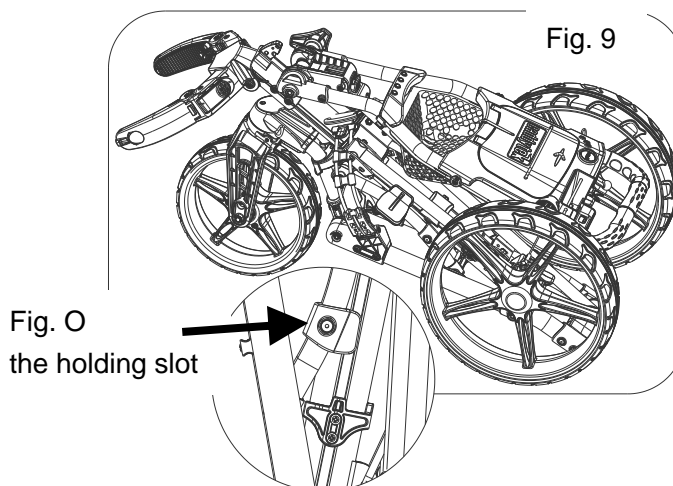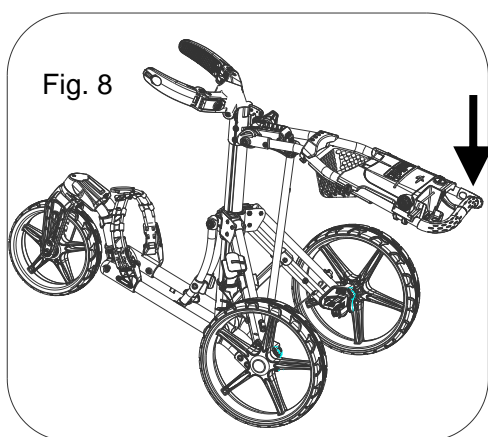

  Remove front wheel for storage of the cart

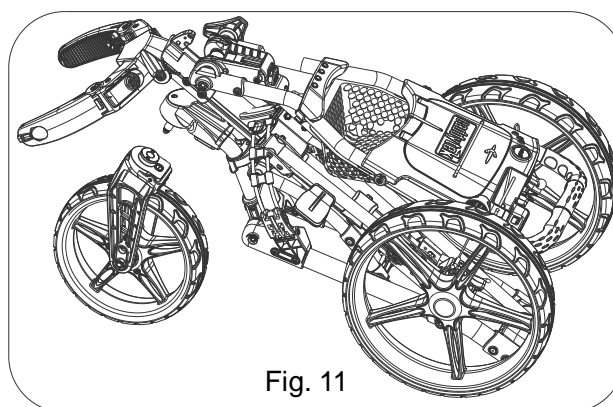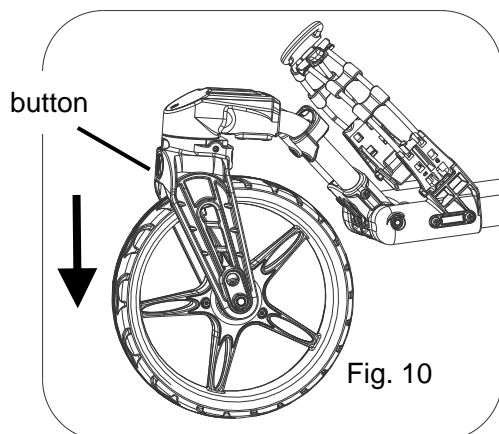

Remove front wheel by pressing the release button as shown in Fig. 10 to store the cart conveniently as Fig. 11.

Fig. 12

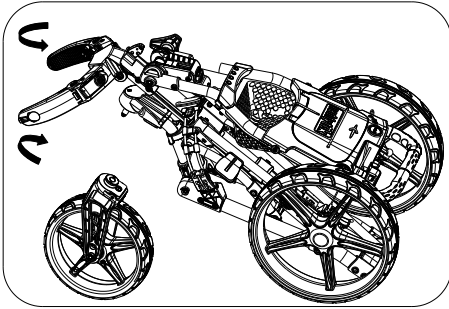 


Fig. 13


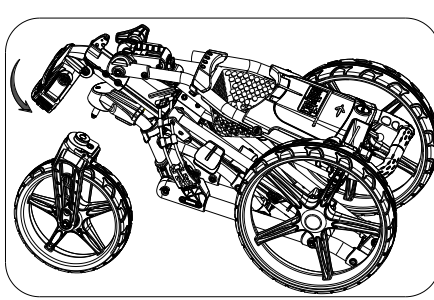 


Fig. 14

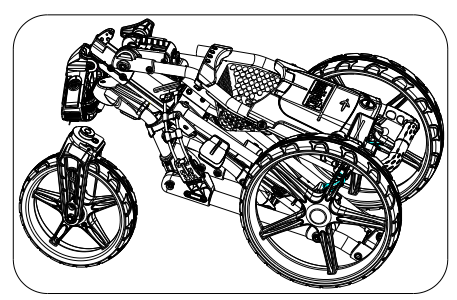 

Simply push the golf bag holder wings inward to closed wings as shown in Fig12, then fold the upper bracket as shown in Fig13/14.

Elastic rope

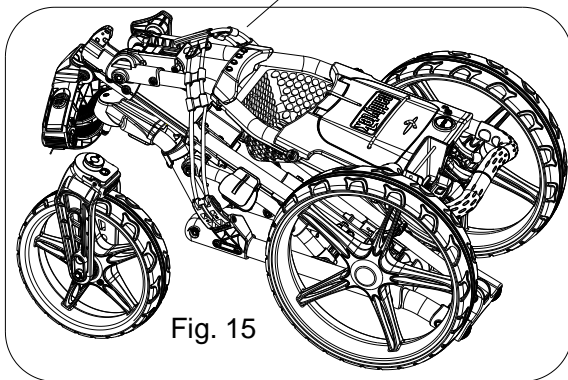 


Fig. 15



Fig. 16

To secure the folded cart with the lower bag holder elastic rope as shown in Fig.15/16.

Upper Golf Bag Holder Bracket

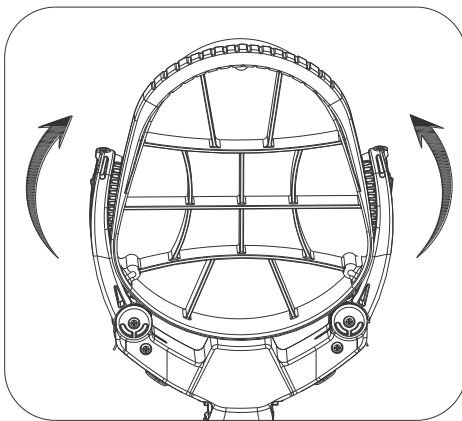 


Fig. 17

Push the both wings of upper bracket inward to clamp the bag as shown in Fig.17.

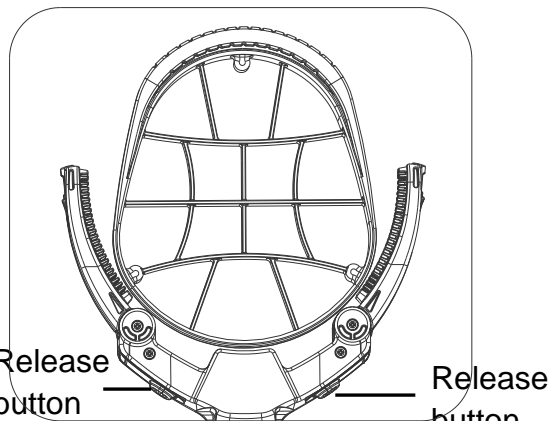 


Fig. 18

Press the release button at the back of upper bracket to lose the wings then golf bag can be taken off shown in Fig.18.

Install the drink holder

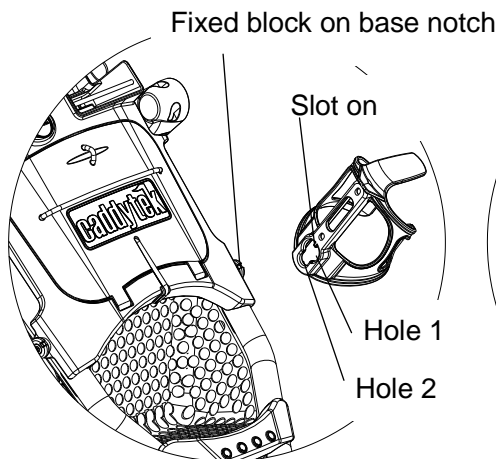 


Fig. 19

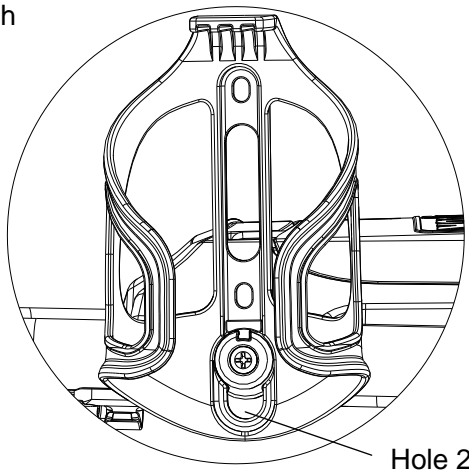 


Fig. 20

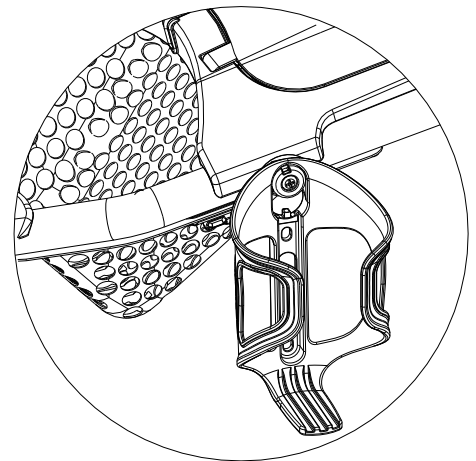 


Fig. 21

When installing the drink holder as Fig.19, align the smallest part of the slot on the holder with the fixed blocks. Then pull horizontally to fit the holder on the base as Fig.20 & 21.

Umbrella Holder

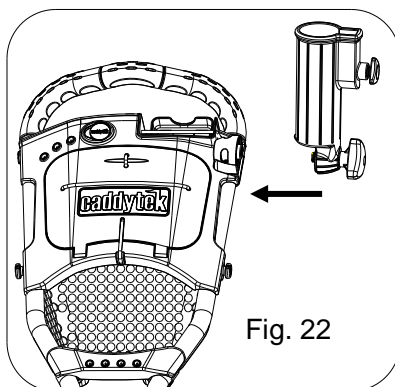 


Fig. 22

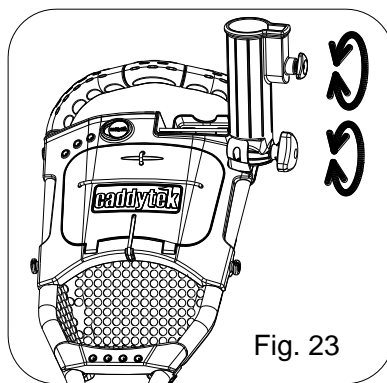 


Fig. 23

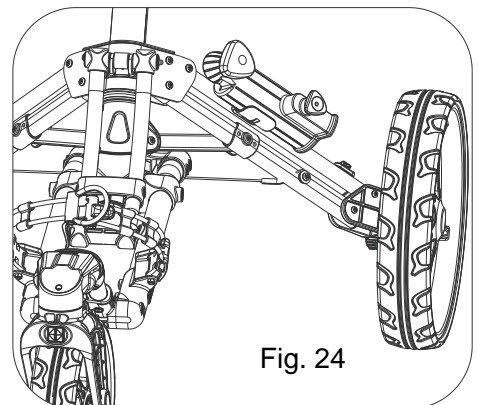 


Fig. 24

To put in use:

Simply attach the umbrella holder onto the cart as in fig. 22/23.

To store:

Attach the umbrella holder to the storage rack on the right leg frame as in Fig. 24.

Use the brake

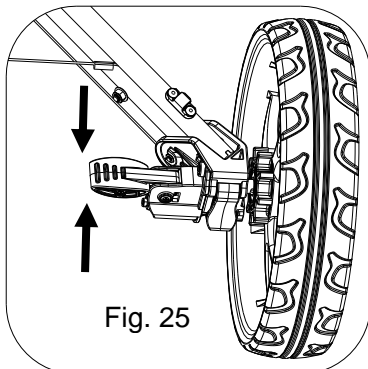 


Fig. 25

Press the foot brake to brake, lift it up to release as Fig. 25


 
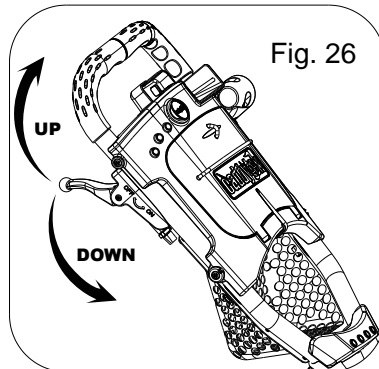 


Fig. 26

Lock and unlock the Swivel front wheel

The front wheel can swivel 360 degree when the Lever on the handle is pull down as Fig.26. The front wheel will be locked and cart going straight when the lever is pull up.

 
Bag Holder Strap Length Adjustment

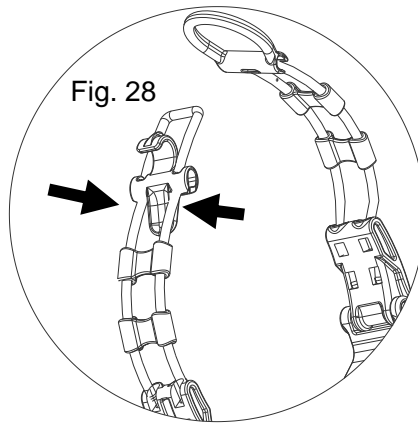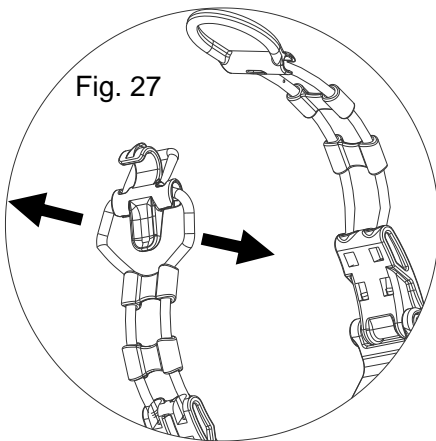

Refer to the Fig. 27 & Fig.28:

1. Pull the elastic strap out of the strap buckle as in fig. 27.
2. Adjust the strap to the desired length.
3. Push the elastic strap back to the strap buckle as in fig. 28.

 To open the scorecard holder cover

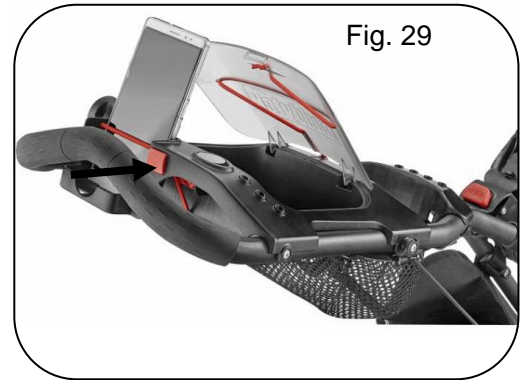

Press the button to open the scorecard holder cover as Fig.29.

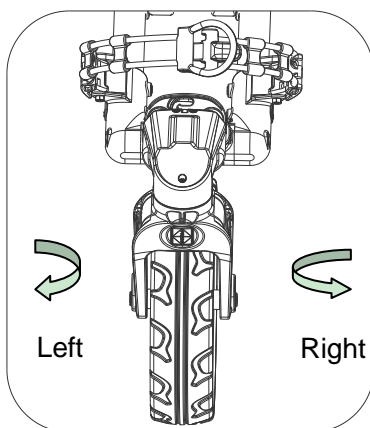 


Fig. 30

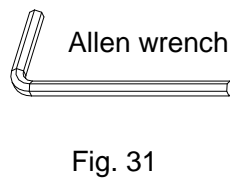 


Fig. 31

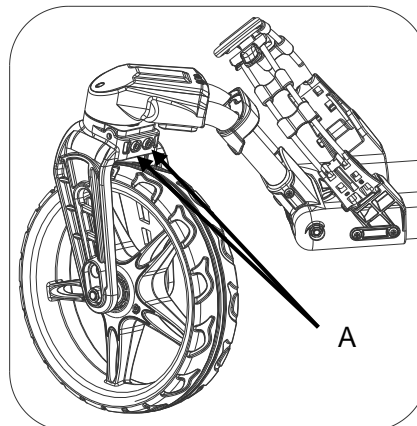 


Fig. 32

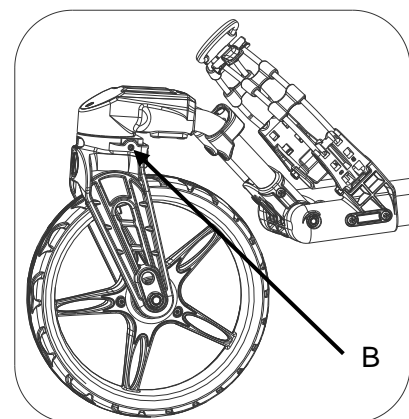 


Fig. 33

When facing the cart:

If the cart veers to **RIGHT**: use the Allen wrench (as shown in Fig.31) to lose the 2 screws (A) on the backside of the front wheel frame as shown in Fig. 32. Then adjust the front wheel to center position by turning the screw (B) **counterclockwise** as in Fig. 33. Tighten the 2 Screws (A) after the front wheel alignment is done.

- If the cart veers to **LEFT**: use the Allen wrench (as shown in Fig. 31) to lose the 2 screws (A) on the backside of the front wheel frame as shown in Fig. 32. Then adjust the front wheel to center position by turning the screw (B) **clockwise** as in Fig. 33. Tighten the 2 Screws (A) after the front wheel alignment is done.

WARRANTY

CaddyTek Inc. warrants its products to be free of defects and workmanship for one year from the date of purchase. We will either repair or replace defective products at our option.

Normal wear and fading of products are not considered manufacturer's defect. This warranty does not apply to claim of damage to items used in connection with CaddyTek Inc. products. In the case of deterioration due to normal use we will repair the item for a normal charge. CaddyTek Inc. is the sole judge of any claim or warranty.

For customers in North America, please contact CaddyTek Inc. for the service. For customers outside of North America, please contact with your dealer for the warranty service or you are welcome to contact CaddyTek Inc. directly.



PRODUCT REGISTRATION

I have read and understand this product's operation and warranty, and wish to record my purchase:

Model: _____

Name (Mr./Mrs./Miss): _____

Address: _____

City: _____ State: _____ ZIP: _____

Tel: _____ E-Mail _____

Date of Purchase: _____ Name of Store/Dealer: _____

Round of Golf per Month: _____ HCAP _____

Signed: _____ Date: _____

Failure to return this card may result in delayed response to you warranty claim

Stamp

Caddytek Inc.
2075 S. Atlantic Blvd., # C
Monterey Park, CA 91754
USA

You can also register your golf cart on www.caddytek.com

